

# IASO®

COVER GR

## Better Outside

### INSTALLATION MANUAL


---

COVER GR

piscinas@iasoglobal.com  
+34 973 27 30 24  
iasoglobal.com

The cover is supplied packed in a plastic bag, provided with the anchors, straps and fastening buckles for securing it to the cover.


Before starting installation, distribute the anchors more or less evenly around the perimeter of the pool, marking and positioning them approximately every 90 cm.

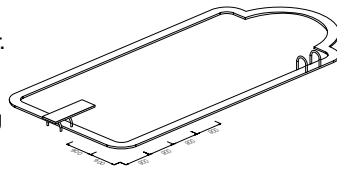

Please note that where there are step cut-outs or recesses, one anchor must be placed on each side of the cut-out.

## ANCHOR INSTALLATION

Drill a Ø10 mm hole, insert the expansion stud and tighten it using the supplied Allen key. Insert the screw to which the strap ring will be secured.

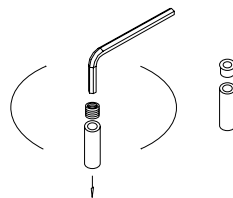


When removing the cover, screw the bolt flush with the ground or replace it with the plastic cap.

## INSTALLATION OF THE COVER FASTENING BUCKLE

Assemble one piece of each type so that they clamp the edge of the cover between them.


The piece bearing the IASO logo must remain on the upper side of the cover.

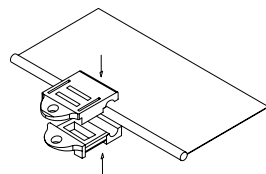

If you wish to disassemble the piece, apply pressure with a screwdriver, opening the tabs to separate the two parts.

## INSERTING THE STRAP INTO THE BUCKLE


To correctly place the strap in the buckle, follow the instructions shown in the diagram.

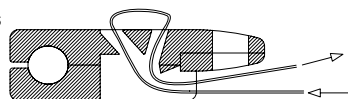

## CORRECT ORIENTATION OF THE TENSIONING STRAP

---


The buckles can slide along the edge of the cover. To achieve correct, crease-free tensioning, the strap must be tensioned perpendicular to the cover.

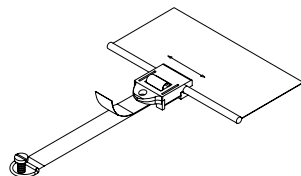


## FINAL INSTALLATION OF THE COVER

---

Starting from one of the short sides of the pool, gradually unfold the cover and secure it to the anchors one by one. Once fully unfolded, re-tension all straps to ensure the cover is free from creases.

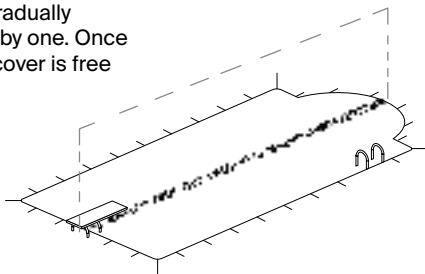

Do not place tensioning straps along the edges of the drainage strips, as tension in these areas may lift them, hinder drainage and cause water to accumulate at the sides.

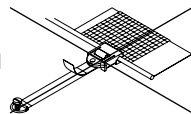


## STEPS

---

### STEP 1

Position the black tension straps with ratchets approximately every 2 m.

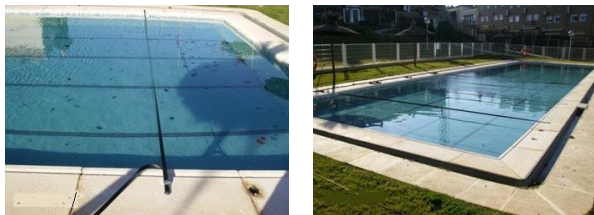

### STEP 2

Install each of the individual covers; refer to the cover installation manual.

### STEP 3

Assembly of the covers

Insert the supplied double-groove PVC profiles approximately every 1 m and join them together using the ties.



### STEP 4

Tension each section using the stainless steel ratchets.



**iasoglobal.com**